ICONX

360° view

It is highly recommended that you visit
www.metalearth.com/360/icx203
to see the completed model before assembling your own

Metal Earth®
3D METAL MODEL KITS

ICX203

Optimus Prime Western Star 5700 Truck

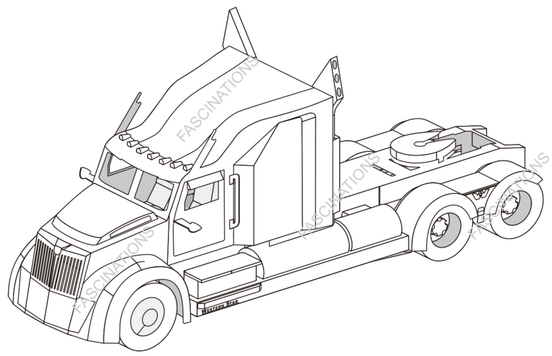

TO CREATE THE BEST CONNECTIONS

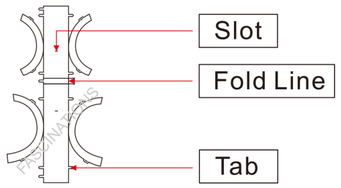

Legends:

- E — Engraved / Color side
- NE — Non-engraved / Silver side
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

Assembly tip:

If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish

Recommended tools:

-Wire cutters: helpful for taking parts from the metal sheets.

-Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.



ASSEMBLY STEPS

Step 1

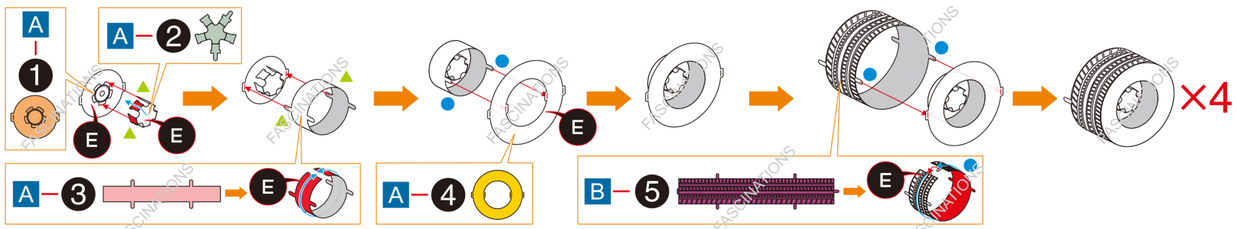

Step 2

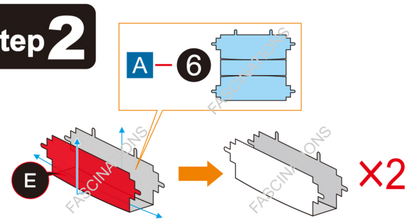

Step 3

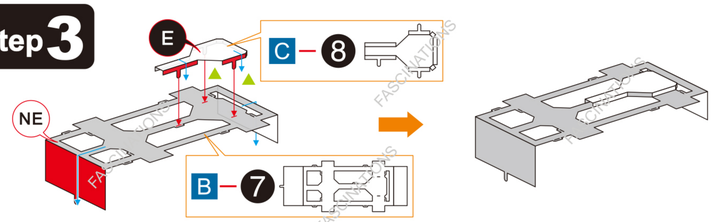

In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.

Go to www.metalearth.com/360/icx203 to see the zoomable PDF version of this instruction sheet

METAL SHEETS

A

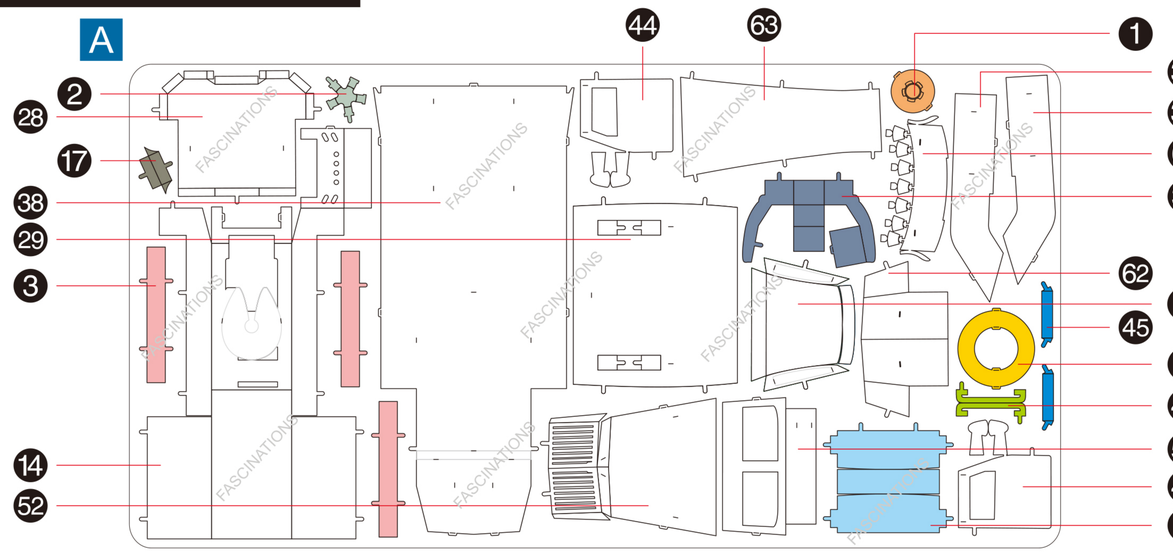

B

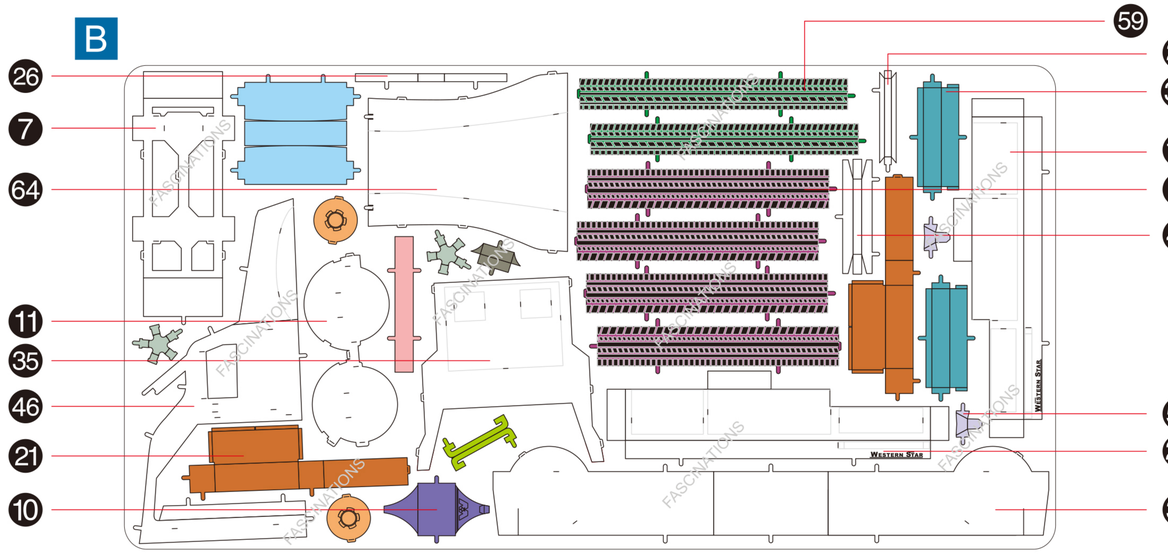

C

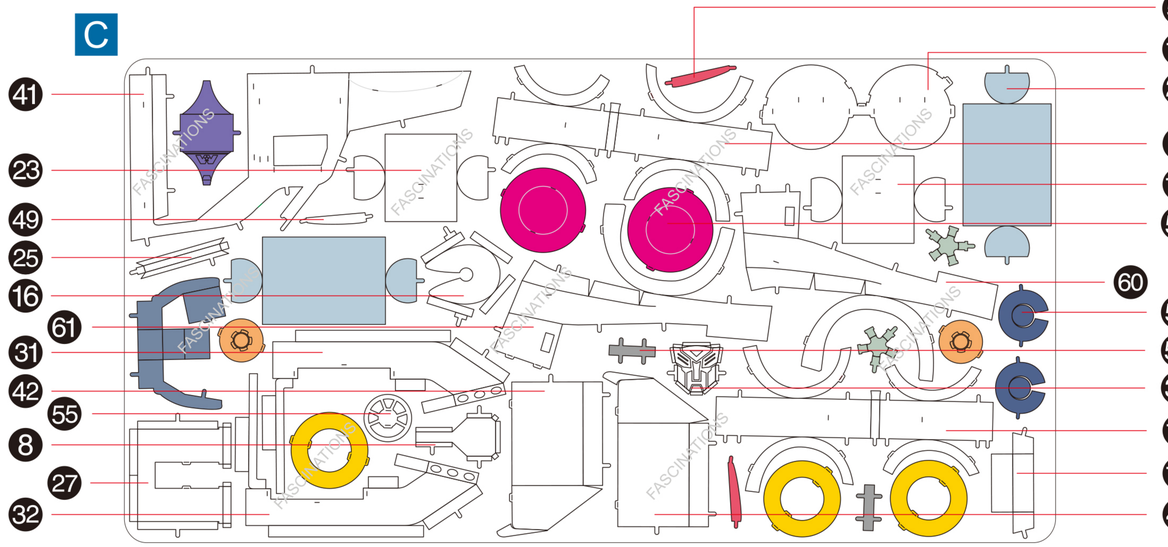

Step 4

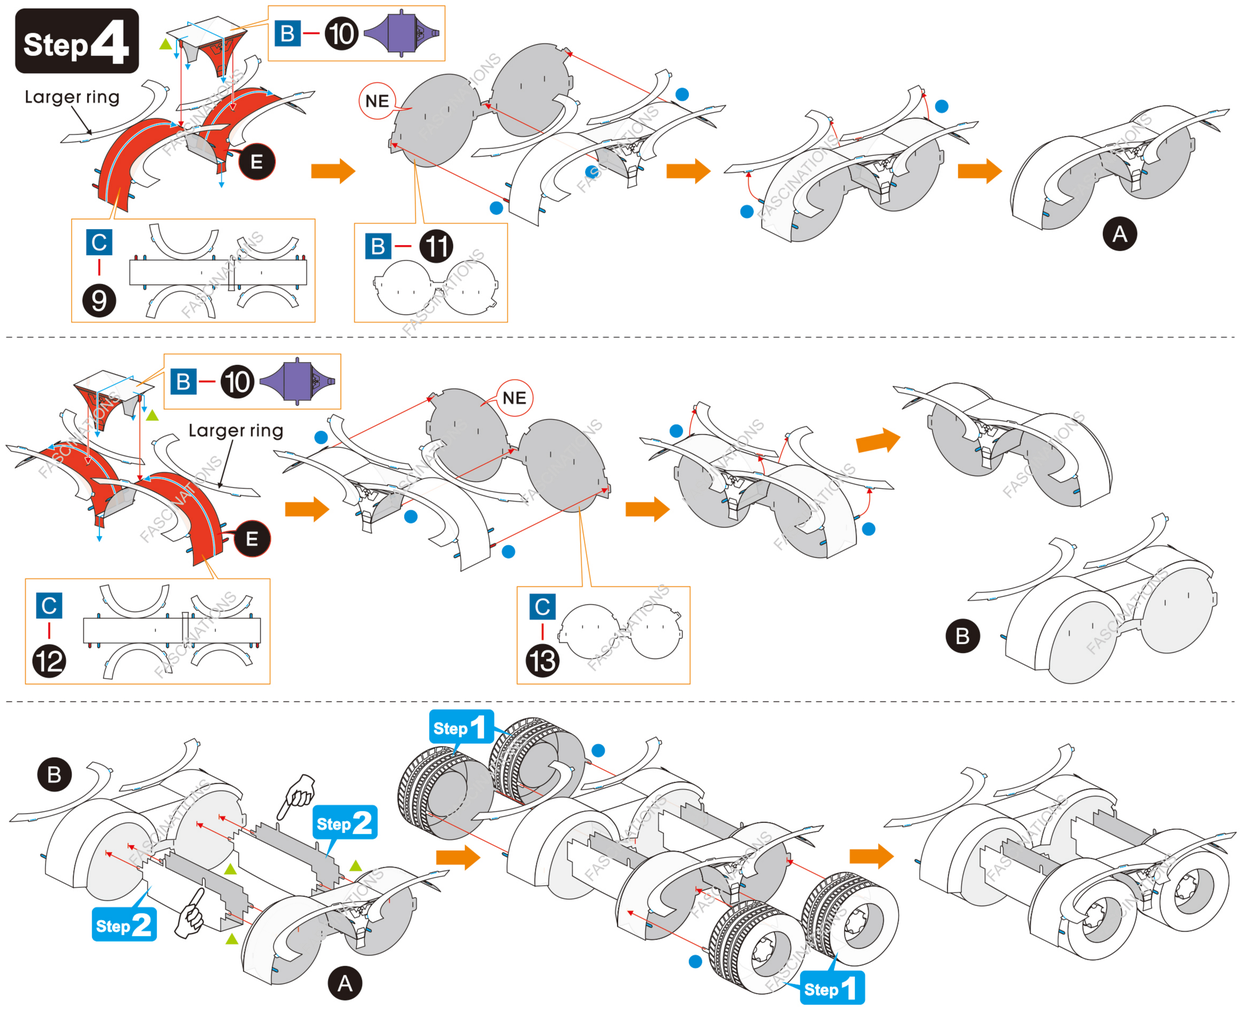

Step 5

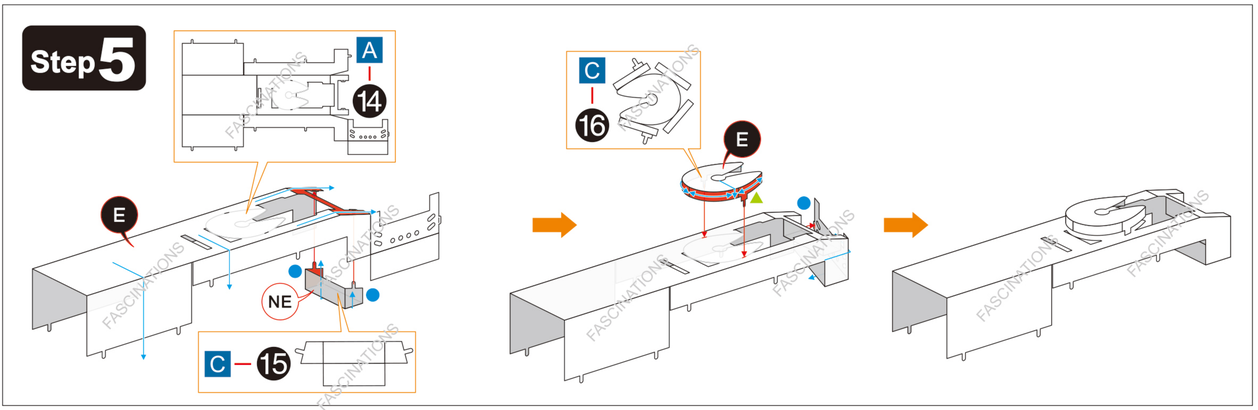

Step 6

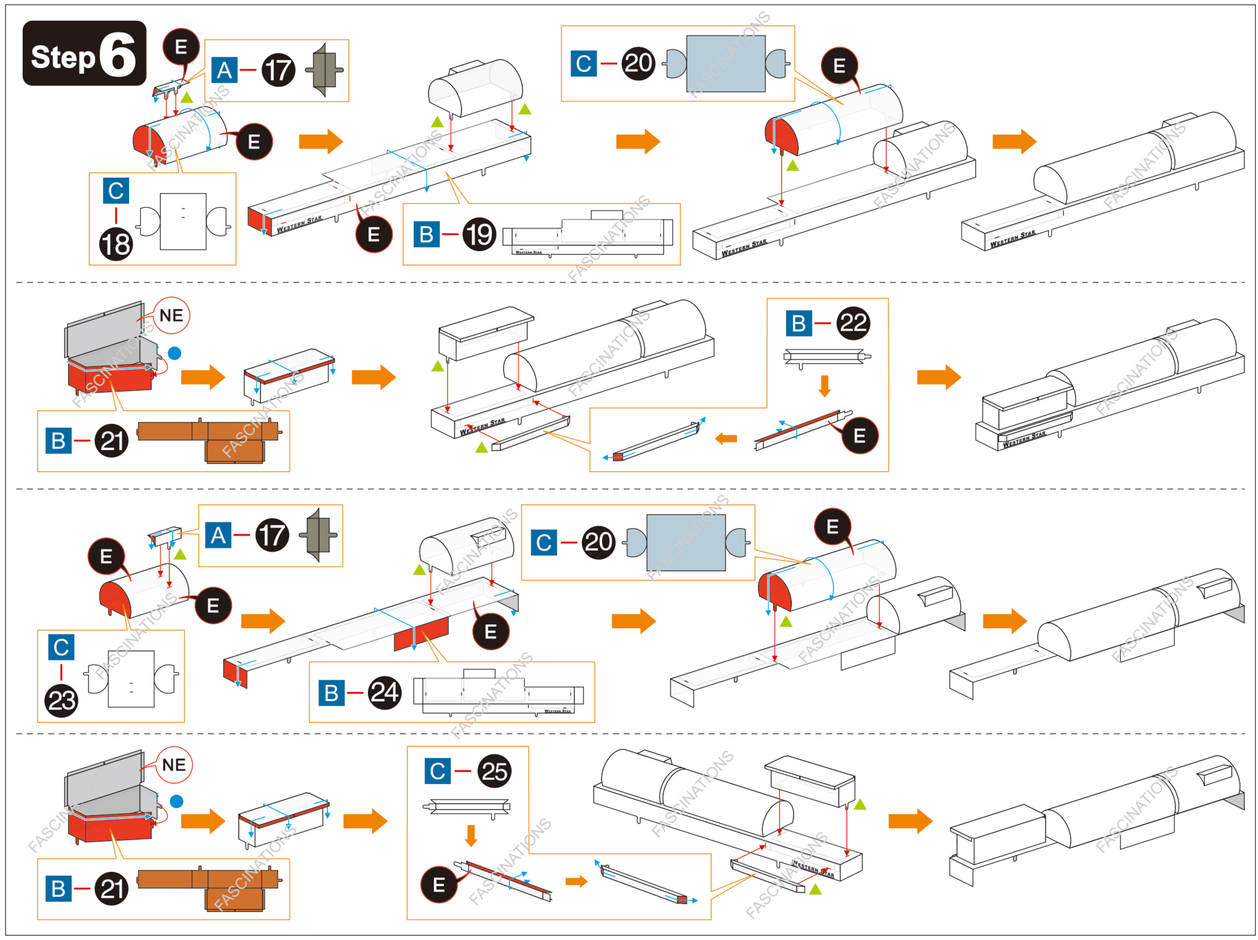

Step 7

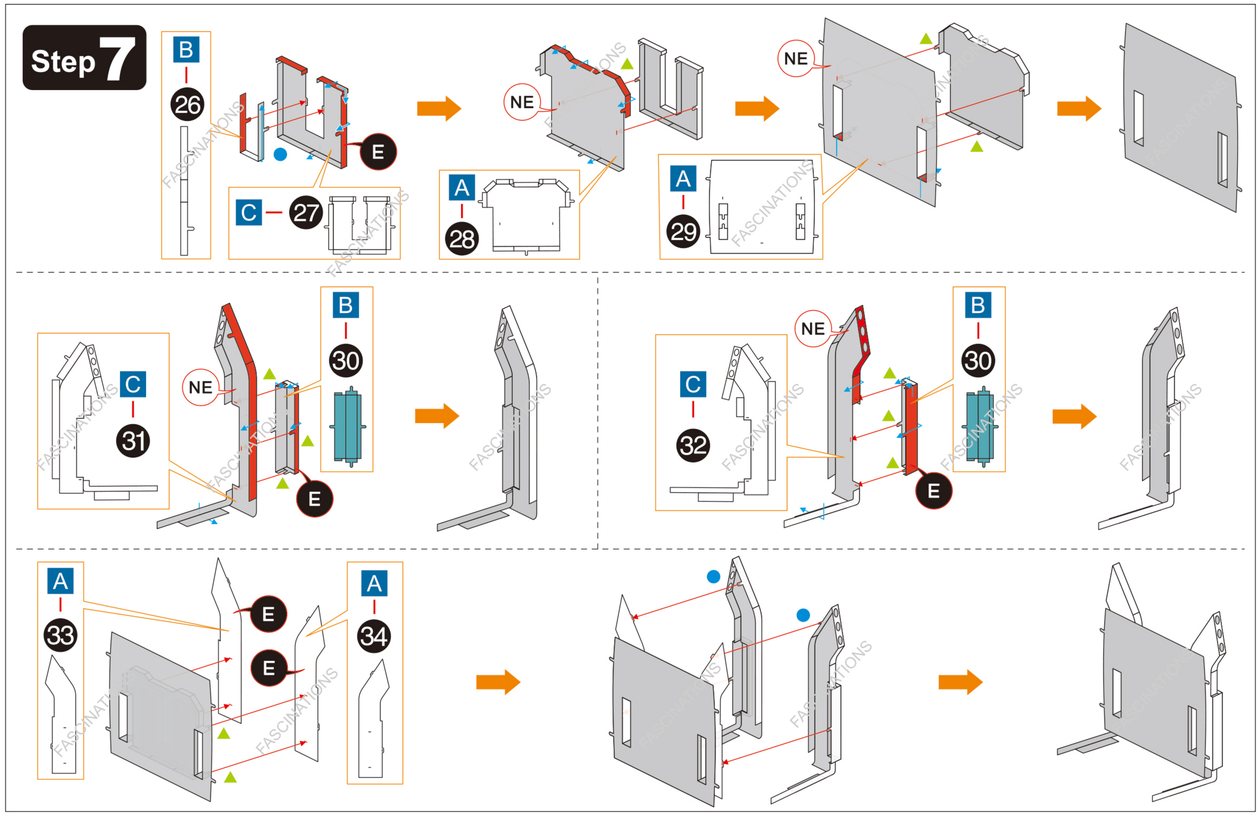

Step 8

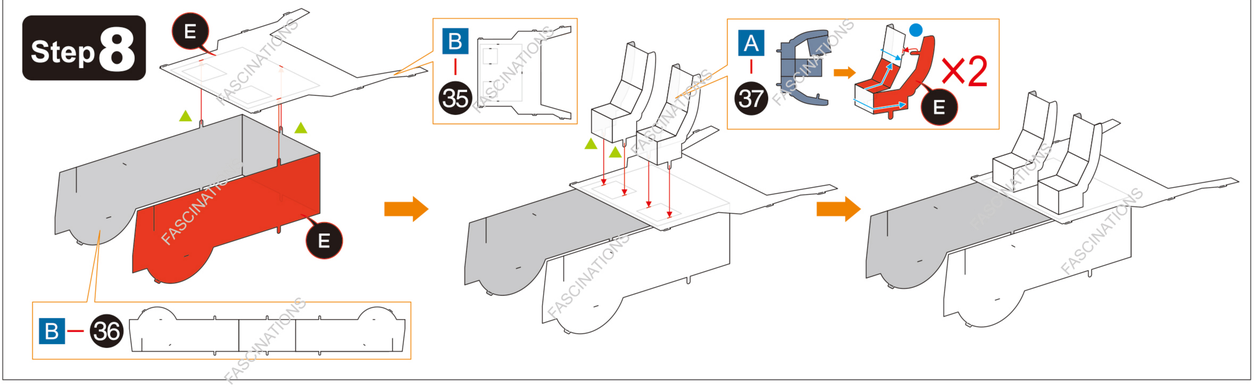

Step 9

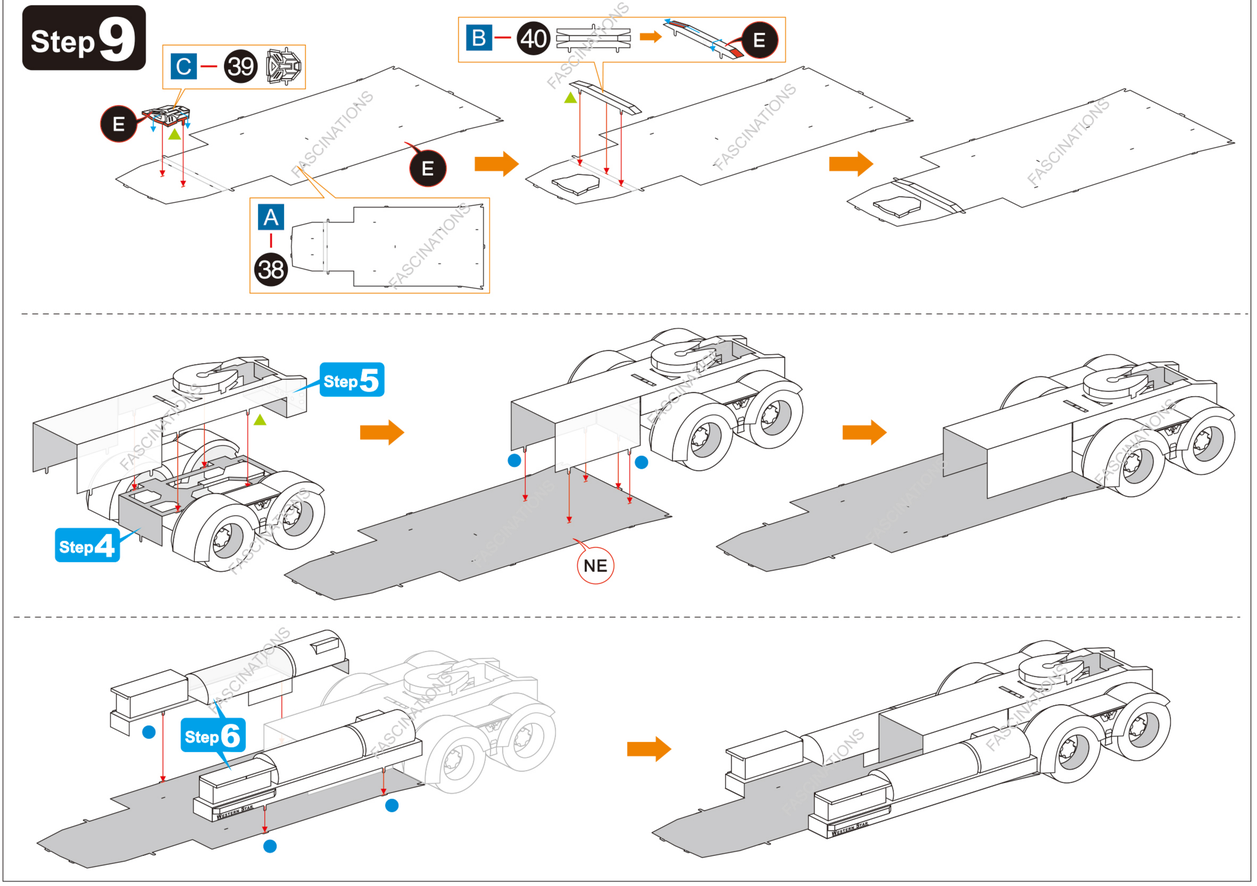

Step 10

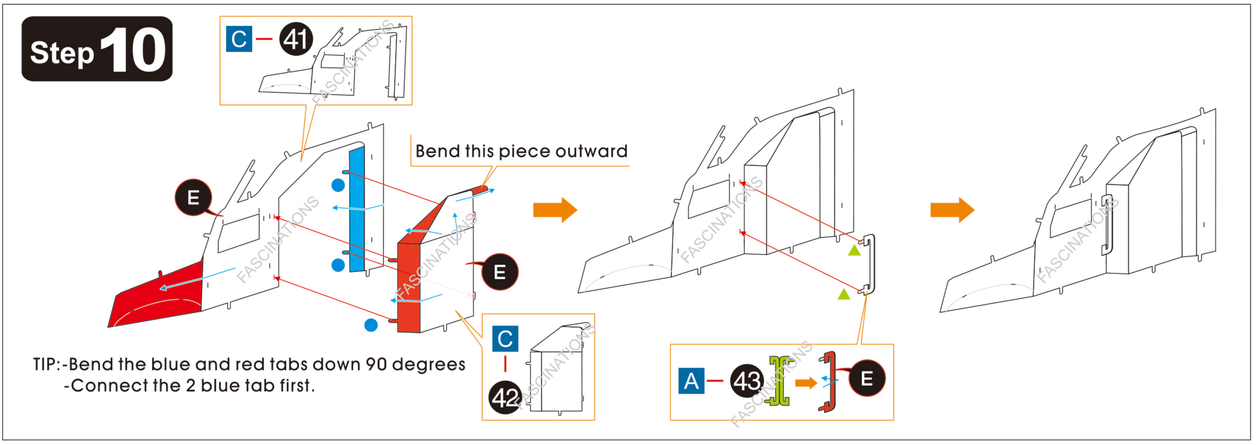

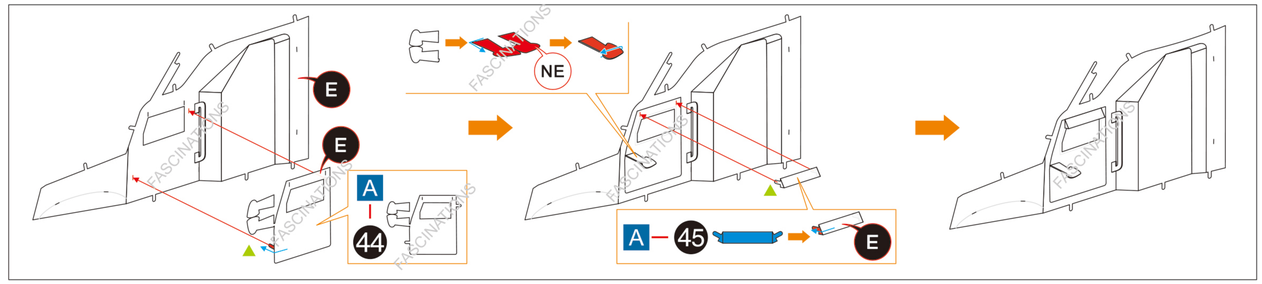

Step 11

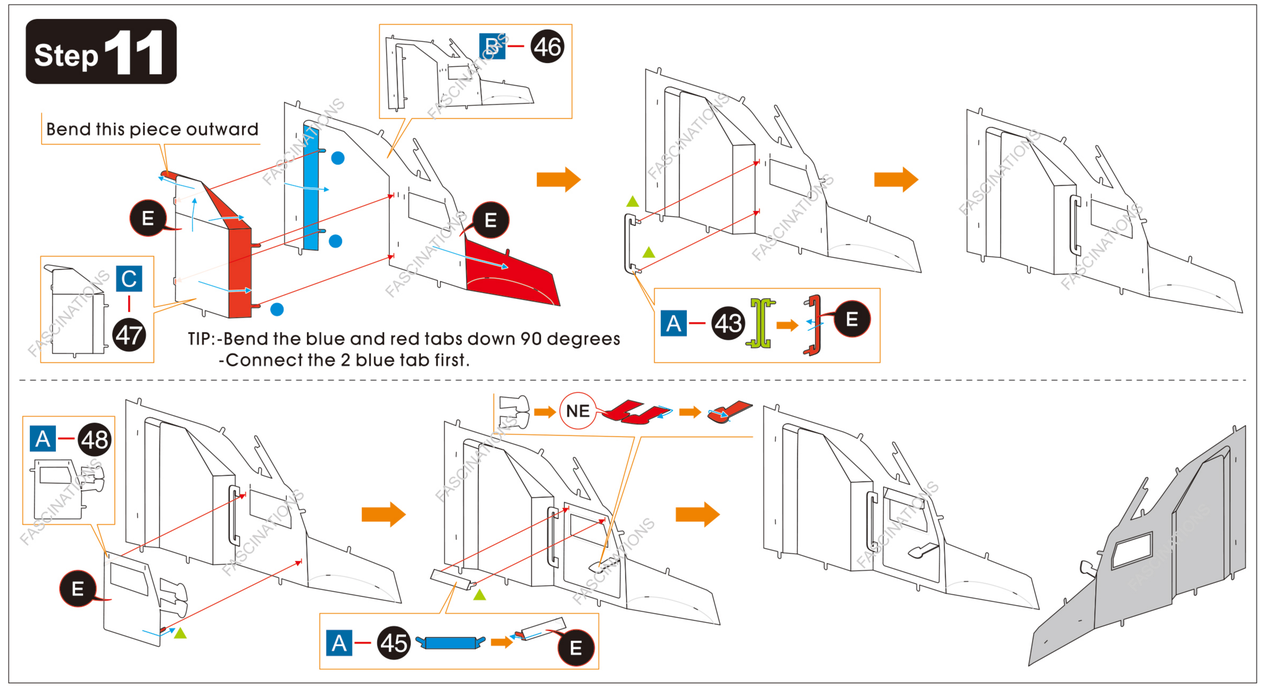

Step 12

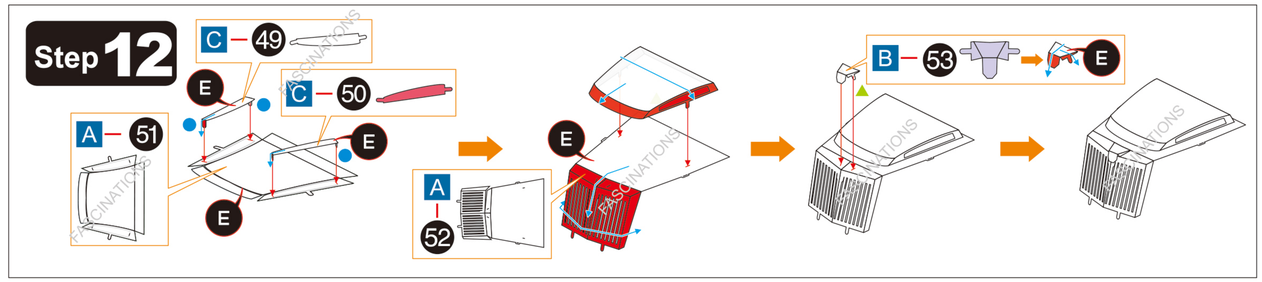

Step 13

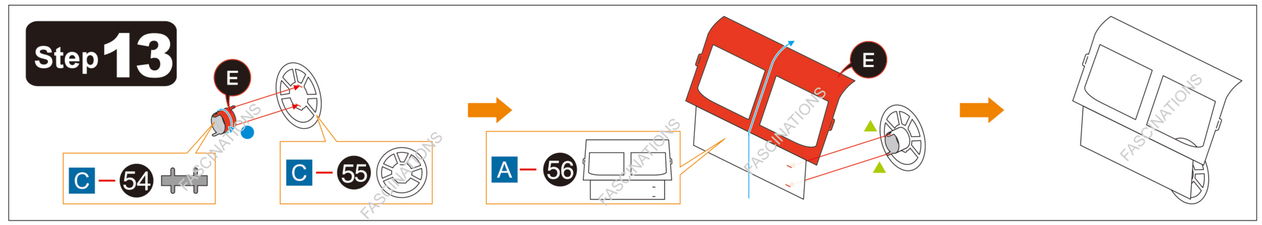

Step 14

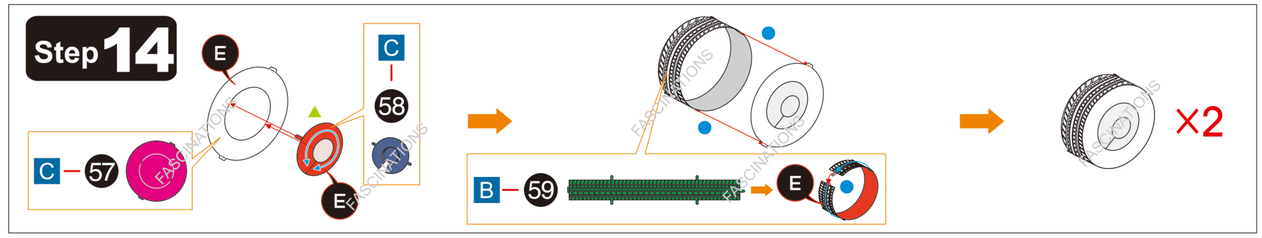

Step 15

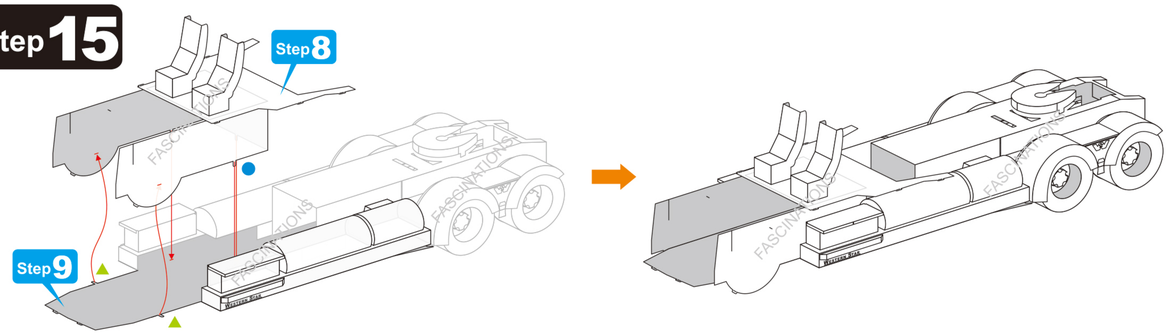

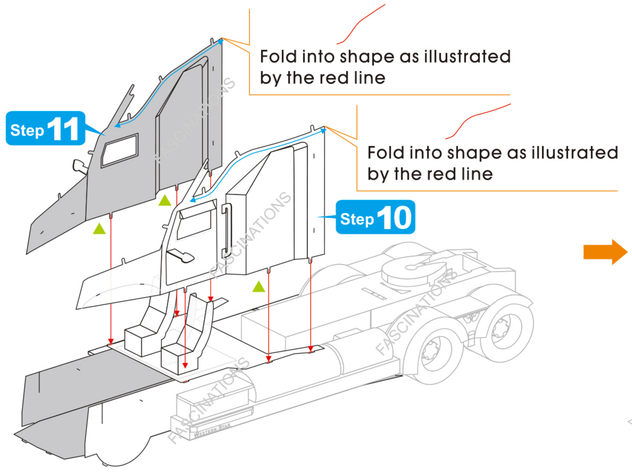

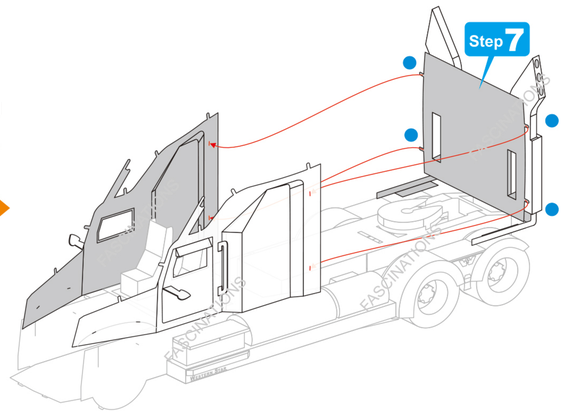

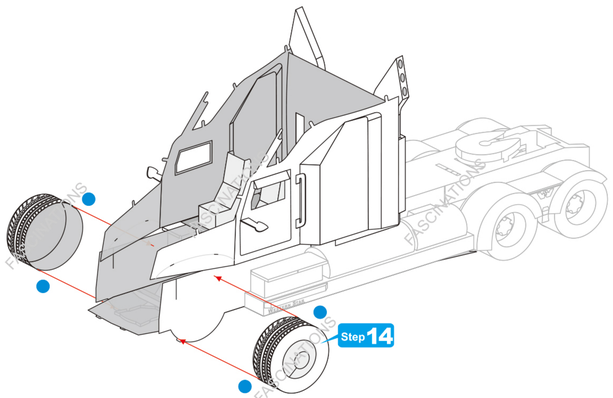

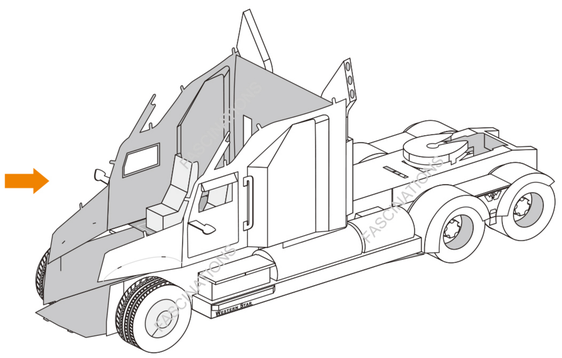

Step 16

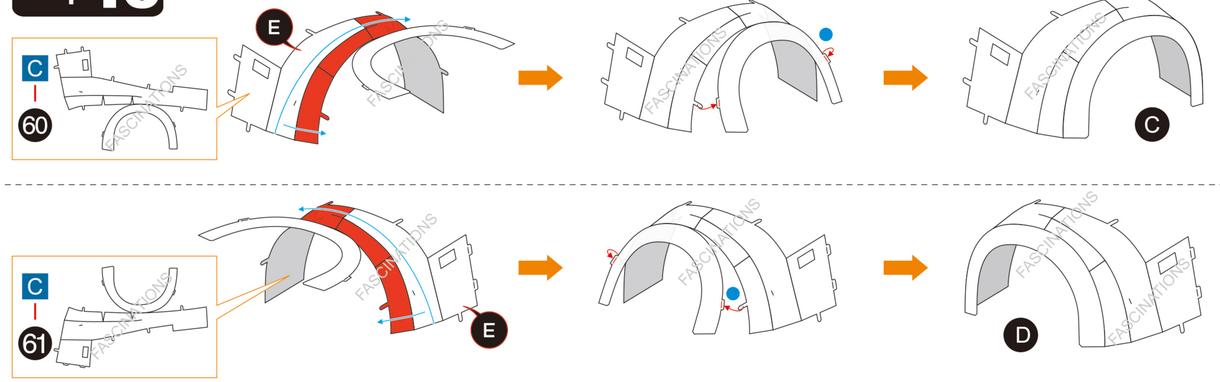

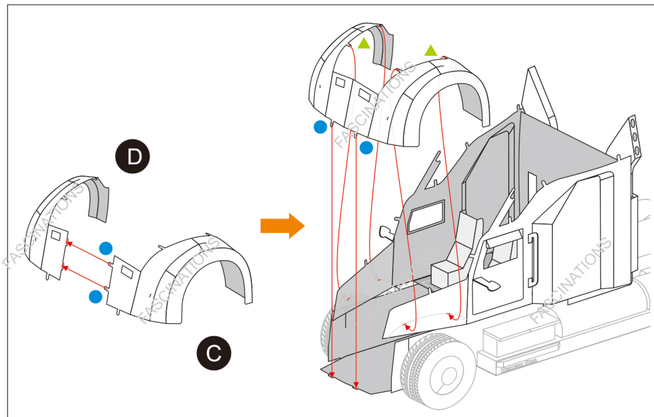

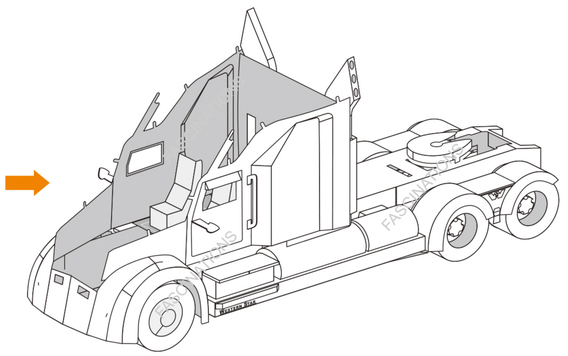

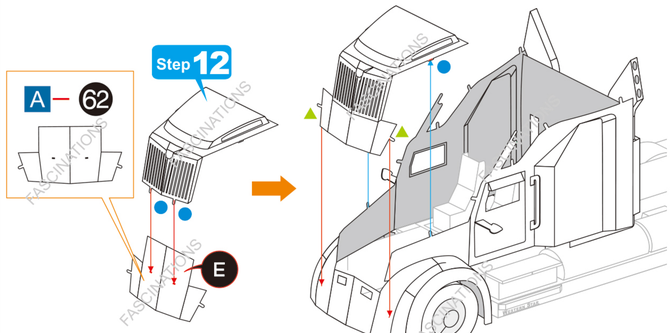

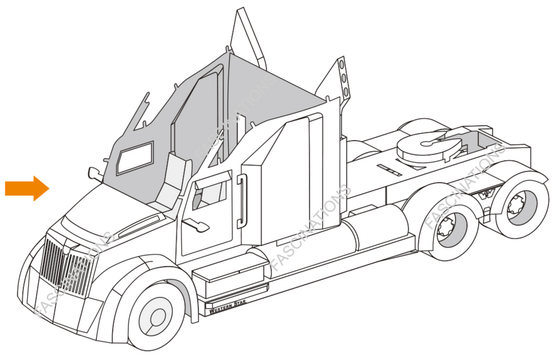

Step 17

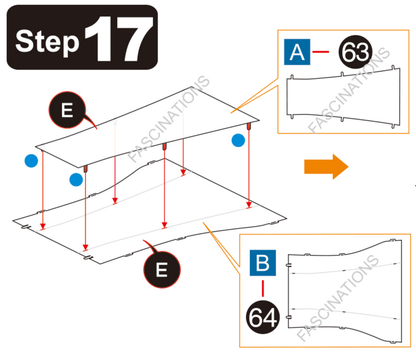

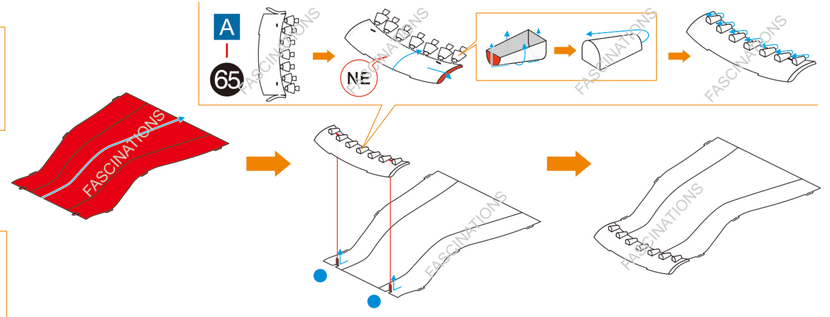

Step 18

Connect the window to the cabin before the top

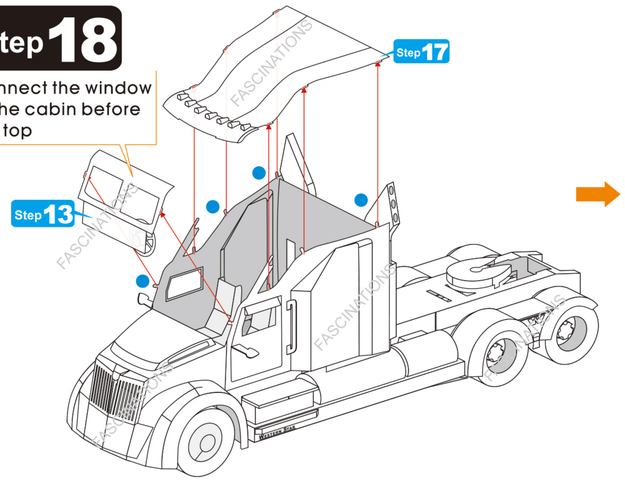

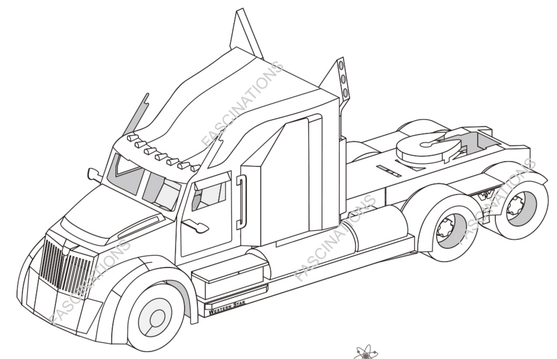

Fascinations®

©2018 Fascinations Seattle, WA
www.metalearth.com